

Godox 神牛

# QT Series

高速影室闪光灯  
Fast-Speed Flash



深圳市神牛摄影器材有限公司  
GODOX Photo Equipment Co., Ltd

地址/Add: 深圳市宝安区福永镇福洲大道西新和村华发工业园A4栋  
Building A4, Xinhe Huafa Industrial Zone, Fuzhou RD West, Fuyong  
Town, Baoan District, Shenzhen 518103, China

电话/Tel: +86-755-29609320(8062) 传真/Fax: +86-755-25723423

邮箱/E-mail: godox@godox.com

705-QT0000-02

Made In China



Instruction Manual  
说明书

Chinese English Bilingual | 中英文双语

## 前言

感谢您使用QT系列高速影室闪光灯，此系列产品适用广泛，除了能满足各种影楼和摄影工作室的日常拍摄，在婚纱摄影、广告拍摄、人像摄影、时尚摄影等方面表现尤为出色。摄影师可以不受回电时间限制，发挥创意尽情拍摄，享受画面捕捉快感，连续捕捉一系列最自然的表情和动作，清晰抓拍最精彩的每一刻。产品有以下亮点：

- 极速回电，0.05-1.2秒回电时间
- 高速闪光，1/5000-1/800s闪光速度
- 高速连拍每秒可达10张
- 50级闪光强度随意选择，LED数码显示屏从5.0-10.0准确定位输出功率
- 150W大功率造型灯，亮度无级可调
- 输出稳定，同一功率高速连续输出变化不超过2%
- 近日光色温，全程色温变化 $\pm 100\text{K}$
- 使用功率遥控器远程控制闪光灯功率大小、造型灯开关、蜂鸣器使能及引闪。

## 目录

01	前言
02	警告
02	注意事项
03	部件
03	• 机身
03	• 附件
04	可选购附件
04	使用
04	• 固定闪光灯
04	• 接通电源
04	• 造型灯使用
05	• 功率调节
05	• 试闪按钮
05	• 同步触发
05	• 光控使用
05	• 声音提示
05	• 记忆存储功能
05	• 无线控制功能
06	• 装卸闪光灯管
06	产品参数
07	维护保养

## 警告

在使用本设备前请仔细阅读以下警告内容，并妥善保管以便所有本产品使用者可随时参阅。

- ▲ 请勿私自拆卸产品，如产品出现故障须由本公司或授权的维修人员进行检查维修。
- ▲ 请保持干燥：请勿用湿手接触产品，亦不可将产品浸入水中或暴露于雨中。
- ▲ 请勿让儿童接触本产品。
- ▲ 摄影灯适用于通风的环境，使用时请保持灯光源部分及散热孔不被堵塞，请勿在易燃易爆的环境中使用。
- ▲ 摄影灯采用电源插头做为断接装置，应保持随时便于操作。
- ▲ 使用时严禁用手接触灯光发热部件。
- ▲ 安装及连接附件时，请关闭开关断开电源，装卸闪光灯管/造型灯时，请确认灯管为冷却状态，避免烫伤，还需佩戴绝缘手套。
- ▲ 请勿将闪光灯头正对人眼闪光(特别是婴儿的眼睛)，否则可能会在短时间造成视力障碍。
- ▲ 在不使用时，请断开电源。

## 注意事项

- ▲ 闪光灯在全功率的情况下连续引闪30次后，需冷却3分钟左右。如果连续使用而不冷却就会产生高温积热。
- ▲ 不可长时间连续使用造型灯，否则可能造成安装在灯头上的柔光箱等易燃附件燃烧。有易燃附件时建议不要连续使用造型灯超过10分钟。如使用超过10分钟，请冷却1分钟后继续使用。
- ▲ 使用束光筒时，请勿长时间点亮造型灯或过频闪光(全功率每分钟不多于6次)。积热会导致闪光灯外壳受损或造成灯的损坏。
- ▲ 避免突然的碰撞，防止闪光灯管或造型灯受损。

## 部 件

### • 机身



- |                |                 |            |
|----------------|-----------------|------------|
| 01. 电源插座       | 08. SLAVE光控模式按键 | 15. 光控接收器  |
| 02. 同步线插孔      | 09. TEST试闪按键    | 16. 无线控制插座 |
| 03. 电源开关       | 10. 数码显示屏       | 17. 保险丝座   |
| 04. 造型灯亮度调节旋钮  | 11. 造型灯指示灯      | 18. 托架     |
| 05. 闪光灯管功率调节旋钮 | 12. 蜂鸣指示灯       | 19. 伞孔     |
| 06. MODEL造型灯按键 | 13. 光控指示灯       | 20. 方向调节把手 |
| 07. SOUND蜂鸣按键  | 14. 试闪指示灯       |            |


### • 附件

1. 电源线
2. 反光罩
3. 灯头保护罩
4. 玻璃灯罩
5. 造型灯
6. 说明书



## 可选购附件

可搭配本公司以下摄影附件使用，以获得最佳的拍摄效果和使用体验：  
功率遥控器、逆变器、柔光箱、反光伞、灯架、蜂巢、雷达罩、束光筒等。

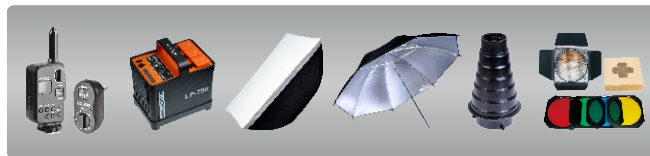

## 使 用

### • 固定闪光灯

- 1、取下灯头保护罩，装上造型灯并套上玻璃灯罩和反光灯罩。

(如想卸下反光灯罩，请往后按灯头上的附件释放钮，同时逆时针旋转反光灯罩至松开即可，如图)



- 2、将闪光灯设备安装在一个合适的灯架上，调整好托架（18）并扭紧固定，方向调节把手（20）可调节灯的方向。伞孔（19）可以插上各类影楼伞。

### • 接通电源

通过电源线接通交流电源与闪光灯，拨动闪光灯上的电源开关(3)，此时电源开关上的小灯亮，表示连接正常。

### • 造型灯使用

造型灯按键（6）控制造型灯的打开和关闭，当造型灯指示灯（11）点亮时，表示造型灯打开；造型灯指示灯（11）熄灭时，表示造型灯关闭；造型灯亮度调节旋钮（4）可对造型灯的亮度进行设置；造型灯点亮2小时会自动关闭，防止在无人状态的长时间点亮，导致高温积热的产生。



如有易燃附件在灯头上，不可长时间点亮造型灯，最好是点亮10分钟后冷却1分钟后再继续使用，并注意易燃附件温度。

### 功率调节

闪光功率通过功率调节旋钮（5）来控制，可以从“5.0”至“10”自由调节，数码显示屏(10)将对所选择功率作准确显示,满足客户在不同环境下对光源的要求。数码显示屏(10)显示“OF”时，表示闪光灯引闪功能关闭。从高档调节至低档，有自放电功能，不需引闪放电。



### 试闪按钮

欲使闪光灯测试闪光而不拍照，请按试闪按钮(9)。摄影师可以通过试闪按钮结合功率调节旋钮(5)来调节闪光亮度。

### 同步触发

同步线插孔(2)规格为Φ6.35mm，此处可插入同步线或者触发器触发插头对闪光灯进行同步引闪。

### 光控使用

光控模式有3种选择，由SLAVE光控模式按键（8）进行切换。

（1）非光控模式：光控指示灯（13）不亮，表示光控功能关掉。

（2）1次引闪模式：光控指示灯（13）亮蓝色，表示闪光灯接收到1次外界闪光可以同步触发闪光。此模式下可以做副灯使用，创造多种光影效果。

（3）2次引闪（防预闪）模式：光控指示灯（13）亮红色，表示闪光灯在2秒内接收到2次外界闪光，接收到第2次时可以同步触发闪光。此模式下可以做副灯使用，适用于TTL闪光环境。具有防预闪功能，带一次预闪功能的相机可用光控功能来实现同步拍摄。

### 声音提示

蜂鸣按键（7）控制蜂鸣提示的打开和关闭，当蜂鸣指示灯（12）点亮时，表示蜂鸣提示音打开；当蜂鸣指示灯（12）熄灭时，表示蜂鸣提示音关闭；每次回电充满时会响“BI-”一声，提示可以引闪。

### 记忆存储功能

闪光灯设有参数记忆功能，调节参数3秒后未变更的，闪光灯会自动存储设置好的参数。下次开机使用时初始设置跟关机前一致。

### 无线控制功能

功率遥控器的接收器插入“无线控制插座（16）”，手持功率遥控器远程控制闪光灯的功率开关和大小、造型灯开关、蜂鸣器开关，也可以连接相机热靴来同步引闪闪光灯。

### 装卸闪光灯管

关闭所有电源并拔下电源线，带上绝缘手套，将闪光灯管上的铁丝拧松，用平衡力拿住灯管两脚间，轻轻往外拉出卸下旧灯管。将旧灯管两脚上的套管取下套到新灯管两脚，拿住新灯管两脚间，对准灯头上两铜柱，用平衡力往里推进。最后将铁丝绕灯管弹片并拧紧固定好灯管。



### 产品参数

型号	QT300	QT400	QT600	QT800	QT1200
闪光能量	300Ws	400Ws	600Ws	800Ws	1200Ws
闪光指数(m ISO 100)	58	65	76	90	110
色温	5600±100K				
电源电压	AC110V-120V~60Hz或AC220V-240V~50Hz				
闪光功率调控	OFF, 5.0~10.0 (1/128-1/1)				
造型灯功率	150W				
闪光触发控制方式	同步线插孔，光控感应，试闪按钮，无线控制插座				
闪光持续时间	1/5000S~1/800S				
同步端口输出参数	9V				
USB端口输出参数	5V/200mA (仅限神牛接收器)				
保险丝AC220V-240V~50Hz:	5A	8A		10A	
AC110V-120V~60Hz:	10A			12.5A	
回电时间	0.05~1.2 秒			0.05~1.5 秒	
尺寸	灯体直径Φ14cm 含把手高23cm				
	含保护罩长41cm			含保护罩长51.15cm	
净重	约2.7kg	约2.8kg	约3.0kg	约3.84kg	约4.1kg

## 维护保养

- 闪光灯在工作时，如发现异常，应立即关掉电源，查明原因。
- 灯体应避免震动，平时注意表面除尘。
- 灯体稍有发热为正常现象，无特别需要时，勿连续引闪。
- 除灯管与造型灯消耗品用户可用原厂配置的自行装卸更换外，所有闪光灯维护工作概由本厂指定可供原厂配件之维修部负责。
- 1年保修，由于灯管与造型灯为消耗品，不在1年保修范围内。
- 经发现擅自检修此闪光灯，将取消闪光灯之一年保修期，维修需要收取相关费用。
- 如果本品出现故障或者被水淋湿，唯有在专业人员维修后方可继续使用。
- 在维修和清洁本品时请断开电源。
- 如有技术更改，恕不另行通知。

## FOREWORD

Thanks for choosing QT series fast-speed flash. It has wide-range applicability, not only perfect for all kinds of studio and workshop photography, but also good at wedding, portrait, advertisement, and fashion photography. Without recycling time limits, photographers can capture a chain of fast-changing facial expressions and amazing moves, and clearly freeze each fleetingly perfect instant into eternal beauty. Among the benefits you'll enjoy:

- Ultra-speedy charging, 0.05-1.2s recycling time
- Multi-freeze shots, 1/5000s-1/8000s flash duration
- Up to 10 shots in one second under high-speed continuous shooting
- Exact output control on LED display, 50 steps from 5.0-10.0 in 0.1 increments
- High qualified modeling lamp, 150W output adjustable
- Small output variability,  $\leq 2\%$  between continuous flashes at the same output level
- High color stability, ranging within  $\pm 100k$  between flashes over the entire power range

## CONTENTS

08	<b>Foreword</b>
09	<b>Warning</b>
09	<b>Caution</b>
10	<b>Names of Parts</b>
10	• Body
10	• Accessories
11	<b>Separately Sold Accessories</b>
11	<b>Operations</b>
11	• Flash Preparation
11	• Power Connection
11	• Modeling Lamp
12	• Power Output Control
12	• Test Button
12	• Sync Triggering
12	• Slave Trigger Model
12	• Buzz Function
13	• Memory Function
13	• Wireless Control Function
13	• Tube Replacement
14	<b>Technical Data</b>
14	<b>Maintenance</b>

## ⚠ Warning

To prevent damage to the product or injury to you or to others, read the following warnings in their entirety before using this product. Keep these Warnings where users can read them for ready reference.

- ⚠ Do not disassemble or modify. Should the product break down, send the defective back to the authorized service center for inspection and maintenance.
- ⚠ Keep dry. Do not handle with wet hands, immerse in water, or expose to rain.
- ⚠ Keep out of reach of children.
- ⚠ Please put the device in a ventilation environment and keep the parts of lighting and heat dissipation holes are unobstructed. Do not use in flammable environment.
- ⚠ As this product adopts make and break device, please keep it easy to be used.
- ⚠ No touching the heating parts of this product.
- ⚠ Please turn off the power and wear insulated gloves before installing and connecting accessories. When replacing the tube or modeling lamp, please make sure that the tube is cool and wear insulated gloves to prevent burns.
- ⚠ Do not flash directly towards naked eyes (especially those of babies), otherwise it may lead to visual impairment.
- ⚠ Disconnect from the power supply when it will not be used for an extended period.

## CAUTION

- ⚠ After 30 continuous flashes at full power, the flash should be cooled down for about 3 minutes. Overheating will occur if it is used continuously without cooling down.
- ⚠ Do not keep using the modeling lamp for a long time; otherwise flammable accessories attaching to flash head, e.g. softbox will get burnt. A 10-minute time is recommended in this case. After 10 minutes, cool it down for 1 minute.
- ⚠ When using a snoot, do not keep the modeling lamp on for a long time or fire too frequently (not over six times for one minute). Overheating will result in damages for strobe housing and/or studio light.
- ⚠ Avoid sudden impacts as this can damage the flash tube and/or modeling lamp.

## NAMES OF PARTS

### • Body



- |                                    |                                |
|------------------------------------|--------------------------------|
| 1. AC Power Socket                 | 11. Modeling Lamp Indicator    |
| 2. Sync Cord Jack                  | 12. Buzz Indicator             |
| 3. Power Switch                    | 13. Slave Triggering Indicator |
| 4. Modeling Lamp Output Controller | 14. Test Indicator Lamp        |
| 5. Flash Output Controller         | 15. Light Sensor               |
| 6. Modeling Lamp Button            | 16. Wireless Control Port      |
| 7. Sound Button                    | 17. Fuse                       |
| 8. Slave Model Button              | 18. Mounting Bracket           |
| 9. Test Button                     | 19. Umbrella Input             |
| 10. Digital Display                | 20. Direction Adjusting Handle |

### • Accessories


1. Power Cord
2. Standard Reflector
3. Lamp Cover
4. Glass Protection Cover
5. Modeling Lamp
6. Instruction Manual



## SEPARATELY SOLD ACCESSORIES

The product can be used in combination with the following accessories sold separately, so as to achieve best photography effects:

Wireless power-control flash trigger, Power Inverter, Softbox, Photographic Umbrella, Light Stand, Barndoor, Snoot, etc

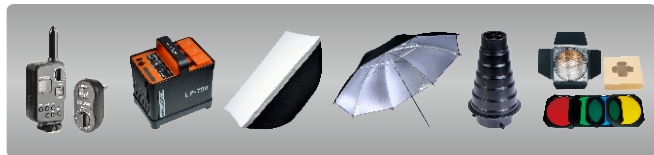

## OPERATIONS

### • Flash Preparation

1. Take down the lamp cover. Install the modeling lamp and put on the glass protection cover and the standard reflector.

(To uninstall the standard



2. Attach the flash unit onto an appropriate light stand. Adjust the mounting bracket (18) for a good angle and make sure it's tightened and fixed. Use the direction adjusting handle (20) to adjust the flash to a desired direction. Umbrella input (19) is for different photo umbrellas to put in.

### • Power Connection

Use the power cord to connect the flash to an AC power source and turn on the power switch (3). The lamp on the power switch turns on, indicating it's connected.

### • Modeling Lamp

Modeling Lamp Button (6) controls the modeling lamp status: when modeling lamp indicator lights up, modeling lamp is on; if not, modeling lamp is off. Modeling lamp

output controller (4) is used for adjusting the power output level of modeling lamp. Modeling lamp will be off automatically after lighting for 2 hours, avoiding overheating due to long-time lighting when the user is not nearby.



When there is flammable accessory on the flash unit, do not keep the modeling lamp on for a long time. It is recommended to cool it down for one minute after 10 minutes' working.

### • Power Output Control

Flash output controller (5) decides different power output, satisfying the light requirements in different environment. The power is adjustable freely from 5.0 to 10.0 which will be accordingly told on the digital display (10). "OF" on the display indicates that the flash triggering function is turned off. It can discharge automatically when the flash output is adjusted from high to low.

### • Test Button

To fire the flash without taking a picture, press the test button (9). It can also help adjust the flash brightness when combined with the flash output controller (5).

### • Sync Triggering

The sync cord jack (2) is a  $\Phi 6.35\text{mm}$  plug. Insert a trigger plug here and the flash will be fired synchronously with the camera shutter.



### • Slave Trigger Model

Three slave triggering models are available and can be set by pressing Slave Model Button (8).

1. No optical control: The slave triggering indicator (13) is off, indicating the slave triggering function is shut down.

2. One fire model: The slave triggering indicator (13) glows blue, indicating the flash will fire synchronously on one external flash. In this model, the flash can function as an auxiliary lamp, offering various effects of light and shadow.

3. Anti-preflash model: The slave triggering indicator (13) glows red, indicating the flash will receive two external flashes within 2 seconds and will fire synchronously after receiving the second flash. In this model, the flash can function as an auxiliary lamp, applicable to TTL system. With this anti-preflash function, synchronization is supported with cameras having a one-preflash firing system.

### • Buzz Function

The sound button (7) is used for deciding whether there is sound reminder for



ready flash after recharging. When the buzz indicator (12) is on, the buzz function is working; when it is off, the buzz function is not working. A “BI” sound will be heard when it’s fully charged.

#### • Memory Function

The device is equipped with memory function for the panel setting. It will help remember the panel setting 3 seconds after you set it. When starting up the flash next time, the panel setting will be the same as that before powering it off.

#### • Wireless Control Function

By using the wireless power-control flash trigger, you can wirelessly control the on-and-off of your flash, modeling lamp and buzzer, as well as adjust the flash output level. To start this function, insert the trigger receiver into the Wireless Control Port (16) and make settings on the trigger. You can also press the camera shutter-release button to trigger the flash by setting the transmitter hotshoe onto the camera hotshoe.

#### • Tube Replacement

Shut down the power and remove the power cord before replacing the flash tube and wear insulated gloves. Then, loosen the iron wire on the tube, keep a balanced hold on the two feet of the flash tube and pull out the old tube gently. Take down the feet casing from the old tube and put it on the new one. Hold two feet of the new tube, and target directly towards the two copper outlets, then push them slightly in. Twine the iron wire on the stainless steel sheet to fix the flash tube.



## TECHNICAL DATA

Model	QT300	QT400	QT600	QT800	QT1200
Max Power (WS)	300Ws	400Ws	600Ws	800Ws	1200Ws
Guide Number(m ISO 100)	58	65	76	90	110
Color Temperature	5600±100K				
Operating Voltage	AC110V-120V~60Hz or AC220V-240V~50Hz				
Power Output Control	OFF, 5.0~10.0(1/128~1/1)				
Modeling Lamp (W)	150W				
Triggering Method	Sync cord, Test button, Slave triggering, Wireless control port				
Flash Duration	1/5000S~1/800S				
Parameters Output from the Sync Cord Jack	9V				
Parameters Output from the USB Port	5V/200mA (only for Godox receiver)				
Fuse (AC220V-240V~50Hz)	5A		8A	10A	
(AC110V-120V~60Hz)	10A			12.5A	
Recycle Time	0.05~1.2s			0.05~1.5s	
Dimension	Flash diameterΦ14cm, height of flash with handle 23cm				
	length of flash with lamp cover 41cm			length of flash with lamp cover 51.15cm	
Net Weight	Approx. 2.7kg	Approx. 2.8kg	Approx. 3kg	Approx. 3.84kg	Approx. 4.1kg

## MAINTENANCE

- Shut down the device immediately when it works abnormally and find out the reason.
- Avoid sudden impacts and the lamp should be dedusted regularly.
- It's normal for lamp being warm when in use. Avoid continuous flashes when not necessary.
- Maintenance of all the flashes is up to our authorized maintenance department which can provide original accessories. Users can replace the flash tube and modeling lamp provided by the manufacturer.
- One year warranty period will be cancelled when any unauthorized maintenance is found.
- If the product had failures or was wetted, it can be continuously used only after it is repaired by professionals.
- Disconnect the power when doing maintenance work or cleaning.
- New changes made to the specifications or designs may not be updated in this manual.